


FLIGHT TYPE DISHWASHER **WASHING PROCEDURES**


PREPARATION




Turn on the Tap.

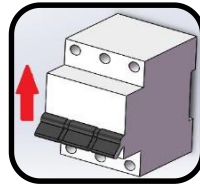

Power on the external power supply.

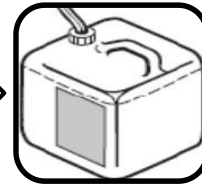

Check chemical supplies.

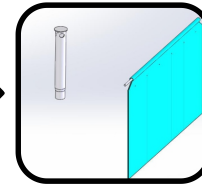

Check proper installation of the door curtain and overflow pipe filter



Press and hold the power switch to initiate water intake and heating



When the power indicator remains steadily lit, water filling is completed


WASHING



Once water temperature reaches the set value, Press the '**Wash**' button to start operation




Remove food residue from tableware and pre-soak if necessary.

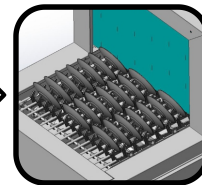


Cup placement guide



Monitor for abnormalities during washing. Press the '**Wash**' button to pause or '**Emergency Stop**'

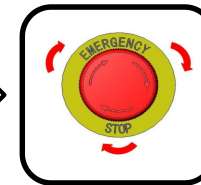

After troubleshooting, unlock the switch clockwise and restart.

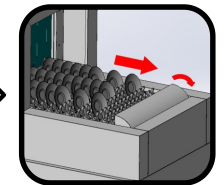


Promptly collect cleaned tableware. In case of jamming, the equipment will pause and resume after issue resolved.

SHUTDOWN AND CLEANING




After clean completion, press the '**Wash**' button to pause operation.

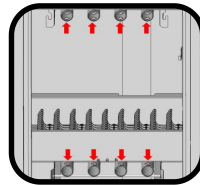

Open the door and remove the washing arm plug (perform daily)




Close the machine door, press the '**Wash**' button, and shut down after 1-min

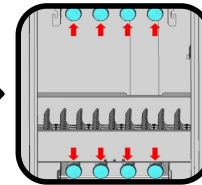

Open the door and reinstall the washing arm plug



Long press the '**Power**' button to shut down the equipment

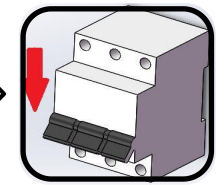


Disconnect the external power supply




Turn off the water tap




Remove and clean the filter screen (perform per shift)

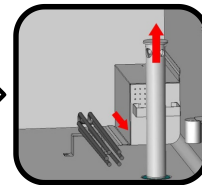

Lift the drain pipe, clean the drain and washing pump outlet filter (perform per shift)

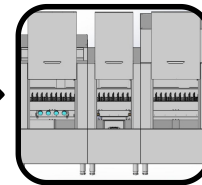

Clean oil stains with a high-pressure faucet.

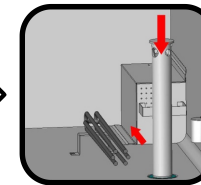

Reinstall the drain pipe and filter (perform per shift)



Close the doors and keep the equipment ventilated and dry



After cleaning the water tank, please reinstall the drain pipe, filter components, cleaning arm, spray arm, and water curtain in the correct order.