


## TT-I777 Explosive Diagram and Parts List

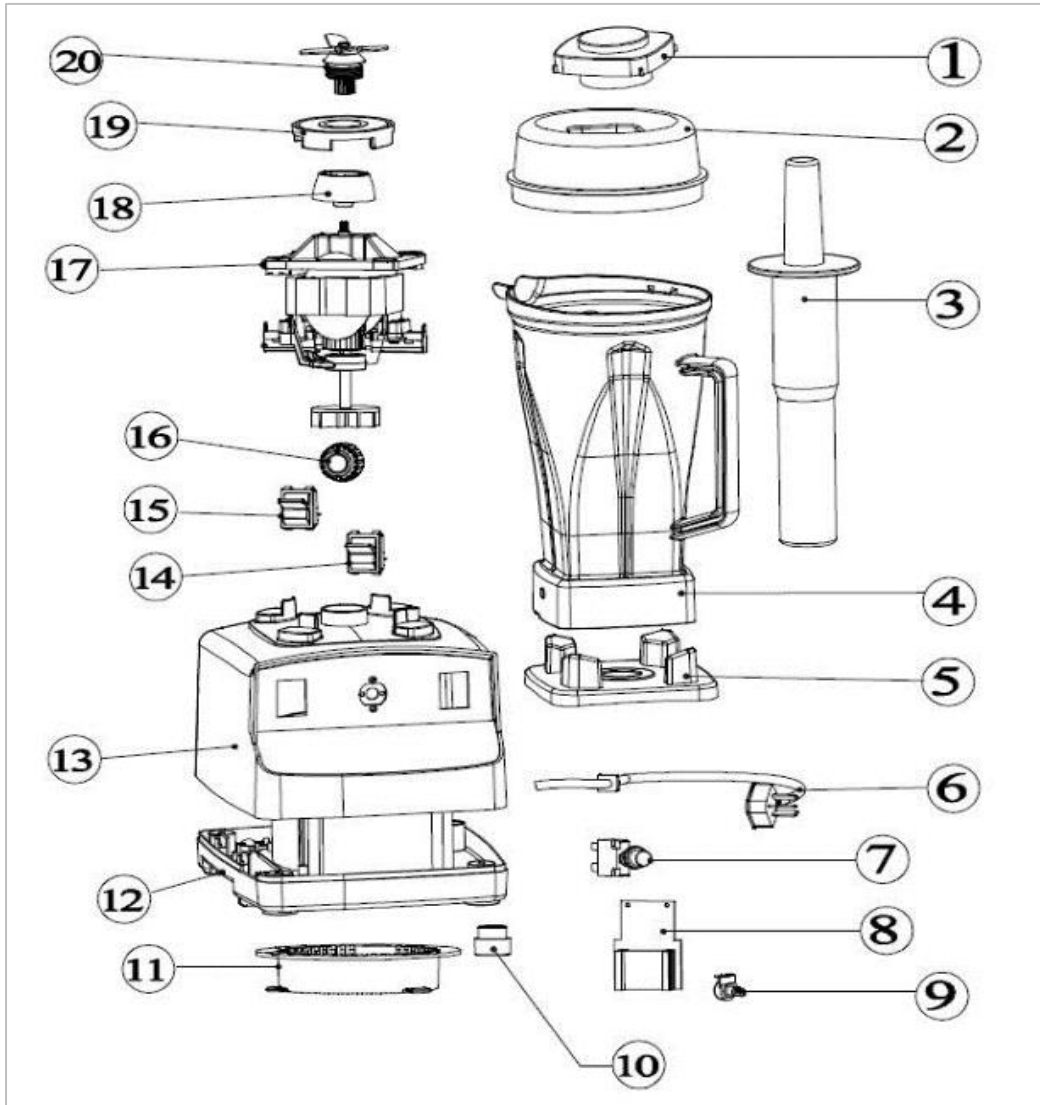

No.	Name	Material	Quantity	Remark
1	Steam Valve Cap	PC	1	
2	Cup Cover	TPR	1	
3	Stir Bar	ABS	1	
4	Cup	PC	1	
5	Cup Mat	TPR	1	
6	Power Cord	PVC	1	
7	Overload Protector		1	7A
8	Speed Control Circuit Board	PVC	1	
9	Potentiometer		1	
10	Rubber Feet	TPR	4	
11	Exhaust Housing	ABS	1	
12	Pedastal	ABS	1	
13	Pedastal Cover	ABS	1	
14	Inching Switch	ABS	1	16A
15	Pulse Switch	ABS	1	16A
16	Knob	ABS	1	
17	Motor	9535	1	
18	Driver	Zinc Alloy	1	
19	Fixed Plate	Zinc Alloy	1	
20	Blades	Zinc Alloy	1	