

IMMERSION MIXER USER MANUAL



Dear customer,

Please read these user instructions carefully before connecting the appliance to prevent damage due to improper use. Please pay special attention to the safety regulation.

Safety regulations

- Incorrect operation and improper use of the appliance can seriously damage the appliance and injure users.
- The appliance may only be used for the purpose for which it was intended and designed. The manufacturer is not liable for any damage caused by incorrect operation and improper use.
- Keep the appliance and electrical plug away from water and any other liquids. In the unlikely event that the appliance should fall into water, immediately pull the plug out of the socket and have the appliance checked by a certified technician. **Not following these instructions could give rise to life-threatening situations.**
- Never try to open the casing of the appliance yourself.
- Do not insert any objects in the casing of the appliance.
- Do not touch the plug with wet or damp hands.
- Regularly check the plug and cord for any damage. Should the plug or cord be damaged have it/them repaired by a certified repair company.
- Do not use the appliance after it has fallen or is damaged in any other way. Have it checked and repaired, if necessary, by a certified repair company.
- Do not try to repair the appliance yourself. **This could give rise to life-threatening situations.**
- Make sure the core does not come in contact with sharp or hot objects and keep it away from open fire. To pull the plug out of the socket, always pull on the plug and not on the core.
- Make sure that no one can accidentally pull the core (or extension cord) loose or trip over the cord.
- Always keep an eye on the appliance when in use.
- Never let children use home appliances without supervision.
- Always pull the plug out of the socket when the appliance is not being used and always before cleaning.
- Warning ! as long as the plug is in the socket the appliance is connected to the power source.
- Turn off the appliance before pulling the plug out of the socket.
- Never carry the appliance by the cord.
- Do not use any extra devices that are not supplied along with the appliance.

Technical data

AC power supply:240V 50HZ/60HZ

Power consumption:750W

(The voltage power use must identical with indicated in rating label.)

Accessory



Power drive



Stir shaft



Egg beater head

Option

 
- (1) . If you want to use the product to mix ,grind ,and smooth soups, sauces and other liquid preparations , Please select the combined unit of Power drive and Stir shaft.



- (2) . If you want to use the product to emulsify, mix,and whip egg whites, mayonnaises and purees. Please select the combined unit of Power drive and Egg beater head.



Assembling

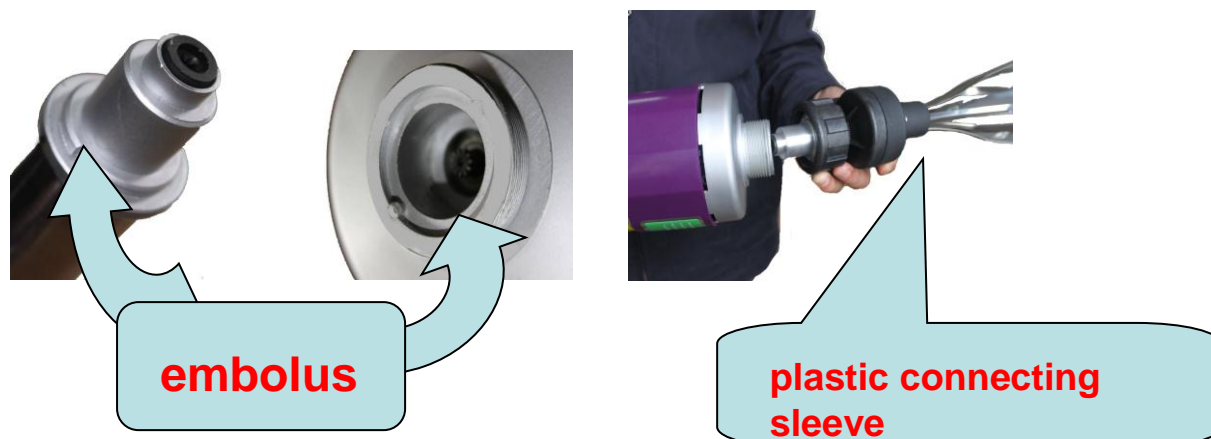


Under the premise of the embolus which in the lower end of Power drive and the top of Stir shaft (or Egg beater head) anastomosis together , Please connected Power drive and Stir shaft (or Egg beater head) together by the screwed plastic connecting sleeve which on the Power drive. **Clockwise to tighten, counter-clockwise to loosen.**

User instructions

1. Open power

- Note: Do not plug/unplug the product into/from the electrical outlet with a wet hand.
- Make sure the A/C power supply before operation is the same with the rating label and in accordance with safety instruction.
- Please confirm all the button are in the “off” positions before operation.

 2. Operation

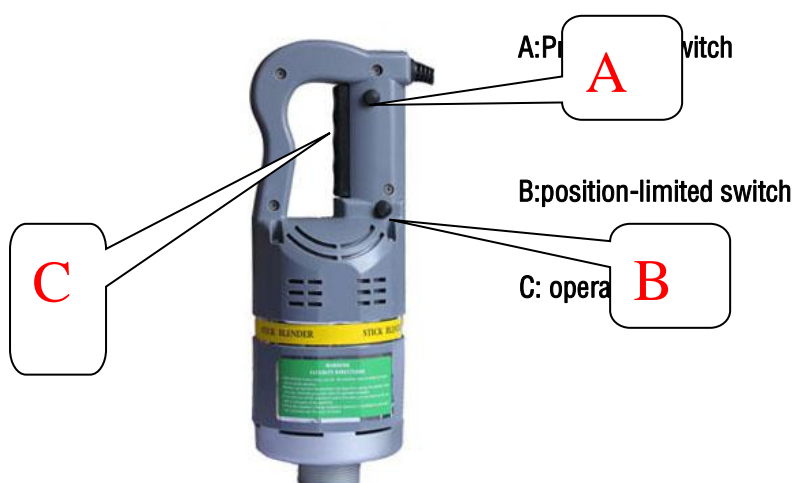

2.1



- Hold the handle on one hand, and press the Protection switch by thumb.

2.2



- Press the operating button by other four fingers, and then the mixer begin to run.

2.3



- this time press the position-limited switch button by the other hand.

2.4

At this time the Protection button、operating button、 Position-limited button are all pressed。

2.5 End.

 


- To stop press the operate button by one hand, then loosen it, the operating system return to original state. Then the mixer stop running.

Operation Note

- Do not touch the mixer, the mixer can keep running automatically.
- Do not touch the moving parts (e.g. the blade) while the mixer is in using.
- The food vessel must be strong, which size had better to match with beater tube. The vessel depths are more than 30CM and the vessel diameter are more than 20CM. Food quantity generally dose not surpass the vessel volume 2/3, prevented food splashes outside the vessel.

Disassembling

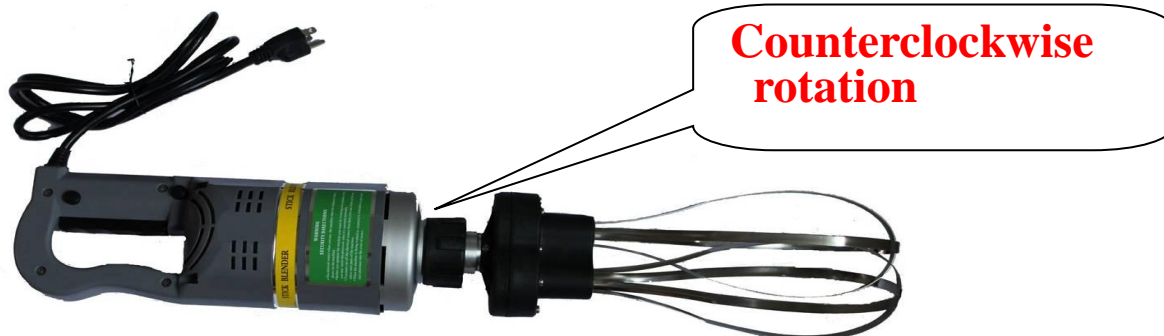

Make the screwed plastic connecting sleeve counterclockwise rotation , separate the Power drive and Stir shaft (or Egg beater head)

Cleaning

- Please power off before clean the machine.
- The power drive、stir shaft and egg beater head must separate then clean.
- The driver section is loaded with the motor and the electric appliance, which only clean by the dry cloth.
- Stir shaft head and cover tube may use water to clean. But it must prevent the water into shaft. separating the whisk and egg beater may clean together. It probably will be damaged the gear system, if the water flow into shaft.
- Please put on the glove, in order to avoid scratches and hurts the hand.
- Preserve in not the mosit、none pollution environment. To keep the machine in a good condition.