

USER MANUAL

HOT DOG WARMER WITH CABINET

PLEASE READ THE MANUAL BEFORE USE.

I . Introduction:

Hot Dog Warmer with cabinet is a new electro thermal product which is designed and developed with foreign advanced technology. It adopts the international popular style, its body made by good quality stainless steel, luxurious and good-looking. The products is made of excellent Germanic electric element, energy-saving and safety. The spray painting material of heating bar is Teflon which is not easily to stick to the surface, innocuous and easy to clean. It is constant-temperature and easy-operating. WHD Series of hot dog warmer is with comprehensive functions and high quality, therefore, it is the best choice for the hotels, restaurants, and west-style food shops, etc.

II. Structure Specialty:

1. The hot dog warmer combined with warming cabinet, not only cook the hot dog, but also warm the food in the warming cabinet, content the user's much more need.
2. There is thermostat which can be adjusted to the temperature range that user needs. The thermostat is no subsection time, please adjust it by your need.
3. Can place 1/1, 1/2, 1/3 or other kinds of food pans, easy to clean.
4. It is made by quality stainless steel, good-looking and useful, clean and healthful.
5. The circuit component is in the different layer with the heating element, so as to prolong the circuit component's usage life.

III. Technical detail.

Model	Roller quantity	Supplied power	Machine's power	Cabinet Capacity	Weight	Dimension
TT-R9	9	1.2KW	220V,50Hz	1/2x4 "	22KG	485x460x380

IV. Operating Instruction:

Before use, please check whether the voltage of power supply is in conformity with the machine's voltage, and whether user's power switch and fuse are in conformity with the request of the machine's power .The machine's body must be earthed properly. It is forbidden to put the tinder and explosive object near the machine. And keep it in the environment with the superior ventilation system.

A. Usage point instruction :

Warning—avoiding burning, electric shock, fire, and hurt, please pay attention to the following:

1. Please read all of the instruction before use the hot dog warmer with cabinet.
2. Keep the children away when use the machine.
3. Do not use the machine when it works abnormally or is damaged.
4. Do not use or place the machine outdoor.
5. Do not place the power cord or plug in the water.
6. Keep the power cord away from the hot place.
7. Do not remove the side board and bottom board of the machine.
8. Do not put and heat any sealed food in the warming cabinet, this machine can't keep such kind of food in proper temperature, so it may lead to the health hurt.

B. Earth instruction:

This machine must be with safe earthing, if the power is short circuit, the earth can avoid electric shock.

C. Operating steps:

1. Place the machine firmly, the switch must be adjusted to “OFF”, and the thermostat must be adjust to “Zero”.
2. Connect the power and press the button “on”, then the indication light is on. Adjust working temperature to required one by clockwise. Now working light is on yellow, the heating tube is working. When the temperature reaches the top, then the thermostat will cut off the power, and the thermostat will get through the power automatically again when the temperature is down, then the heating tube is working again. But please remember the temperature of tube must be in the asked range.
3. Place the hot dog between the rollers.
4. Use Wooden nips or bamboo nips to pick the food out when the hot dog is ok, do please avoid to use sharp metal to roll up or take out the food, otherwise, it will hurt the spray painting of heating roller.
5. Using the warming cabinet, please adjust the thermostat to proper temperature by clockwise, then the indicator is on and the heating element starts to work. When the temperature is up to the fixed temperature, the thermostat will cut off the power, and indicator will be off, the heating element will stop working. When the heating element’s temperature is down, the thermostat will connect the power again, the heating

element will heat again, so as to keep the temperature around the fixed temperature.

6. Turn the power as “OFF” if you want to stop its operating.

V. Repair and Maintenance:

1. Please cut off the power before clean the machine, and clean it by soft, dry cloth. If necessary, please use neuter washing material, it is forbidden to use sharp metal, so as not to hurt the spray painting of heating roller.
2. Please regularly check the machine to keep it normally used.
3. If the electric component, or the power cord is damaged, the repairmen must be done by the professional electrician.
4. Do not wash the machine directly by water.

Breakdown and Elimination:

Breakdown	Probable reason	elimination
Connect the power,it doesn't work.	①Power switch is damaged。 ②Inner cord isn't well connected。	①Change a new switch。 ②Check and fix the cord.
The power indicator is on,but rollers don't move.	①Motor is damaged。 ②Capacitor is damaged。	①Replace a motor。 ②Replace a capacitor。
The rollers move, but they are cool.	①The heating elements are damaged。 ②The thermostat is broken。	①Replace heating elements。 ②Replace the thermostat。
The machine works,and rollers are hot,but the indicator is off.	Indicator is broken	Replace the indicato.

VI. Circuit diagram.

