WAFFLE BAKER USER MANUAL

Please read this manual carefully before using.



NO.18 - 105, HUAGANG GARDEN, ZHONGSHAN AVENUE, GUANGZHOU, CHINA T: 86-20-38768241 | F: 86-20-38769376 | **WWW.TWOTHOUSANDCO.COM**

I . Technical parameter

Name	1-Head Waffle Baker	2-Head Waffle Baker
Model	TT-E5A	TT-E5B
Voltage	220V	220V
Power	1000W	1000+1000W
Dimension	250×450×300	500×450×300

\mathbf{I} . Precautions

- 1. The voltage for using must be coordinated with the supplied voltage.
- 2. Install a tripodal socket with good ground-connection beside the equipment.
- 3. The temperature can be adjusted in the range of $25^{\circ}C\pm 5^{\circ}$.
- 4. There is timer-setting equipment in this appliance. It only shows operating time and has no connection with electric function.

III. Instruction

1. Plug in socket, press power switch then indicator is on, equipment begins to heat. When temperature goes up to 250°C, the equipment stops heating automatically. When temperature lowers

 $250^\circ C$ the equipment get through electricity automatically and heats again. It does repeatedly in this

way to make sure temperature is constant in the range of 250°C.


2. It needs 12 minutes from pressing power switch to the temperature of oven goes up to 250° C.

3. When temperature of this equipment goes up to 250° C, paint a layer of edible vegetable oil onto mould. Then make pulp, and put them into template, and cover it. Adjust the timer on right side (the range of setting time is $0 \sim 5$ minute; operator can set time with their own). When time is to the setting one, the oven will give out a sound "Ting" to point out operator that time is up, the production is finished. Then operator can make other food. When food all is finished, operator should cut off electricity.

4. User can make time setting according to the difference of prescription of pulp and luster of food customer likes. Generally, the more time lasts the darker luster will be, whereas, it is not. But time cannot be too short, or food will not be hot and with no luster.

5. Cleaning: This equipment can be washed by wet towel with cleaner, but it cannot be washed by water directly and in water. Or its electric function will be destroyed.

IV. Circuit diagram

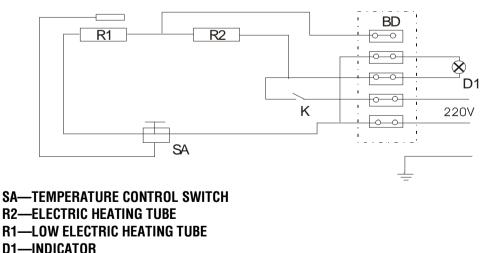

K—POWER SWITCH



NO.18 - 105, HUAGANG GARDEN, ZHONGSHAN AVENUE, GUANGZHOU, CHINA T: 86-20-38768241 | F: 86-20-38769376 | **WWW.TWOTHOUSANDCO.COM**

BD—CONNECTED-SCREW

V. Troubleshooting

Trouble	Cause	Resolve
Get through power and press	1. Temperature control	1. Change temperature
switch, indicator is on but not	switch broken	controller
heat	2. One of electric tubes	2. Change broken electric
	burned	heating tube (there are tow,
		each is 110V)
Get through power and press	Temperature control switch	Change temperature control
switch, indicator is on,	broken	switch
temperature rises but it cannot		
be controlled		
Get through power, heating	Indicator broken	Change indicator
normally but indicator is not on		
Get through power and press	Power supply is not normal,	Check power or change fuse
switch, indicator is not on and	not get through power or fuse	
not heat	melt	

