


TT-K4 Explosive Drawing

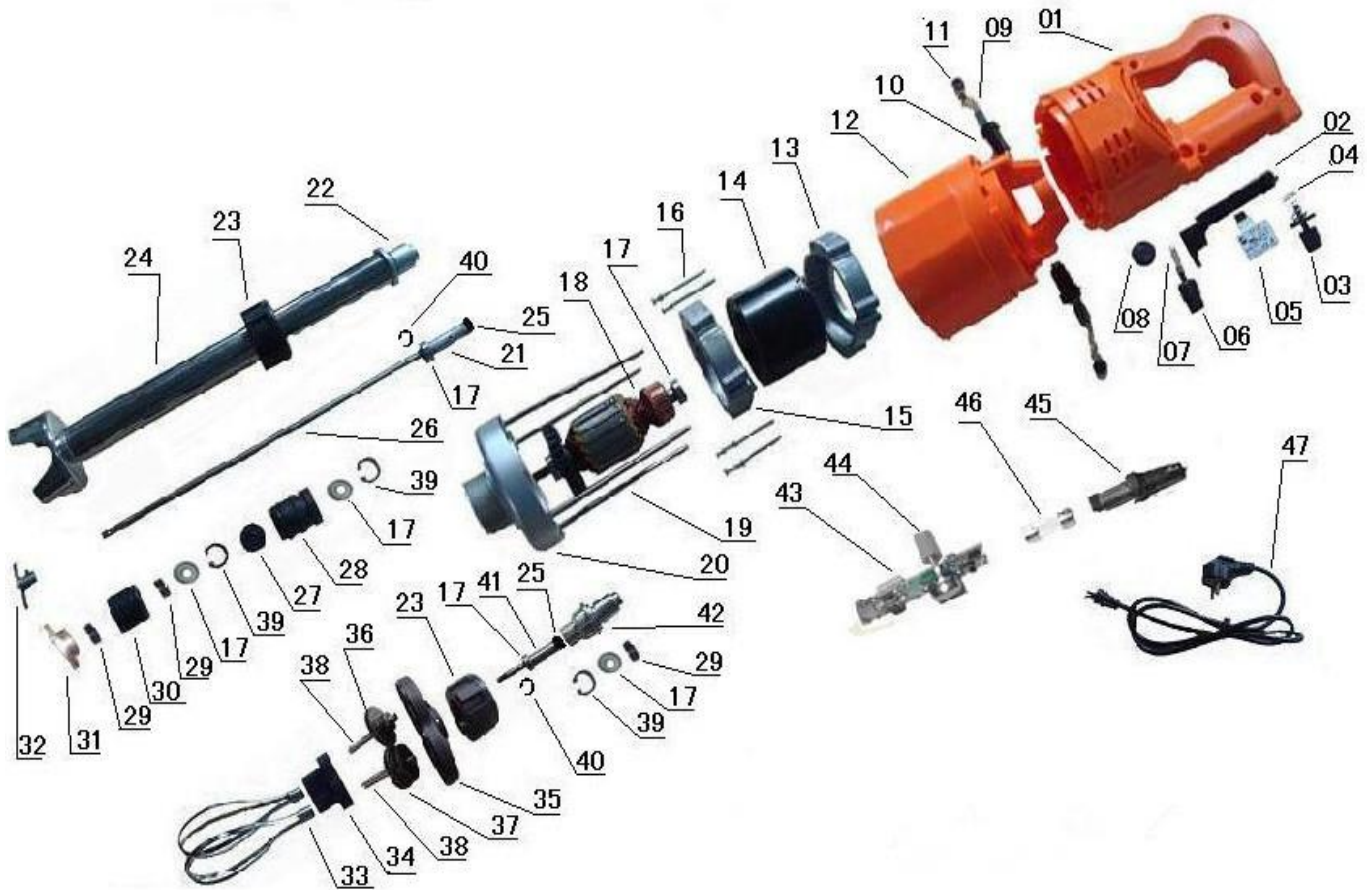

No.	Description	No.	Description
1	Handle	25	Internal Gear
2	Handle Switch	26	Core Rod (370mm)
3	Protection Button		Core Rod (450mm)
4	Large Spring		Core Rod (530mm)
5	Power Switch	27	Oil Seal 25
6	Locking Button	28	Bearing Block (Middle)
7	Small Spring	29	Oil Seal 18
8	Handle Connection Strap	30	Bearing Block
9	Carbon Brush	31	Sealing Cap
10	Carbon Brush Holder	32	Blade
11	Carbon Brush Holder Cap	33	Egg Beater
12	Housing Case	34	Gear Shift Base
13	Motor Upper End Cover	35	Gear Shift Base Cover
14	Stator	36	Transmission Gear
15	Motor Bottom End Cover	37	Spiral Gear
16	Stator Screw	38	Gear Shaft
17	Bearings	39	Big Circlip
18	Rotor	40	Small Circlip
19	Long Bolt	41	Transmission Shaft
20	Flange	42	Egg Beater Joint
21	Adapter Sleeve	43	Speed Controller
22	Pipe Connection	44	Speed Controller Knob
23	Big Nut	45	Fuse Holder
24	Mixing Bar 370mm	46	Fuse
	Mixing Bar 450mm	47	Power Circuit
	Mixing Bar 530mm		