

# HOW TO FIX IGNITION ISSUE

Step 1: This is the control panel, please check this first, to confirm it is working or not? If it works, check the step 2.

Step 2: Please check if you can listen the ignition sound "DADA", if there is no sound, means that the igniter is broken, if there is a sound, please check the step 3.

Step 3: open this panel to check the igniting needle can produce the sparking or not, if there is no sparking, the igniting needle is broken, if there is sparking, please check the step 4

Step 4: If there is no problem of the steps above, it means that the gas amount is not enough, please loosen the screw on this air blower to open the hole on it a little bigger.

