# Griddle
# User Manual

Please read this manual before using.

TT Series Stainless Electric Griddle is designed by advantages of overseas products. They have features of new style, reasonable structure, easy to operate, good warmer result and saving energy. They form a complete producing system with YXD Series Electric Baking Oven, BS Series Pillar Warmer Display Cabinet, EF Series Electric Fryer and HT Series Electric Cooking Oven, with features of easy operation, reasonable distribution and occupy less space. They are equipments for Chinese and Western food restaurant, Karaoke room and fast-food restaurant.

## I. Basic parameter

| Model | Name | Voltage | Power | Size of vat | Dimension | Note |
|---|---|---|---|---|---|---|
| TT-WE101 | Griddle | 220V~240V | 3KW | 550×350 | 550×430×230 | Single temperature controller |
| TT-WE102 | Griddle | 220V~240V<br>380V~415V | 4.4KW | 728×400 | 730×500×230 | Double temperature controller |
| TT-WE106 | Griddle/Grill | 220V~240V<br>380V~415V | 3KW | 550×350 | 550×450×230 | Single temperature controller |
| TT-WE104 | Griddle/Grill | 220V~240V<br>380V~415V | 4.4KW | 728×400 | 730×500×230 | Double temperature controller |
| TT-WE1283 | Griddle | 220V~240V | 6KW | 700×400 | 760×600×350 | Double temperature controller |
| TT-WE1284 | Griddle/Grill | 220V~240V | 6KW | 700×400 | 760×600×350 | Double temperature controller |

## II. Instruction

Double temperature controllers are besides two sides of the machine and they can be used alone. The left one can control the temperature of the left vat; the right one can control the temperature of the right one.

Shut on the power switch K1, the green indicator is on, at that time electricity reaches to the machine. Rotate the temperature controller clockwise to the red point, at that time the yellow indicator is on and the green indicator is off. The green indicator is on and the electric heating tube works again and the temperature goes up again. It repeats again and again to make sure temperature is constant in the setting range.

According to different food and adjust the needed temperature to get the deal result of making food.

## III. Troubleshooting

| Trouble | Cause | Resolution |
|---|---|---|
| 1. Shut on power switch K1, the indicator is not on. | 1. Fuse of power switch is burned.<br>2. The connection of power cord is not well. | 1. Replace a suitable fuse.<br>2. Firm power cord. |
| 2. Yellow indicator is not off. The ascend of temperature cannot be controlled. | 1. The connection of indicator is wrong.<br>2. Temperature controller is out of action. | 1. Correct it with right connection.<br>2. Replace temperature controller. |
| 3. Indicator is not on, but temperature control is normal. | 1. The contact of indicator is not well.<br>2. Indicator is burned. | 1. Firm connection.<br>2. Replace indicator. |

## IV. Attention for installation

The using voltage of the machine must be coordinated with the supplied voltage.
User should install a suitable power switch or air switch.
There is a grounding screw behind this oven. The grounding blot should be connected with more than 2.5square mm copper wire according to safety rules for safety sake.
Before using this product, please check all parts and power supply and ground connection.
The shell of this machine must be grounded well for safety sake!

## V. Circuit diagram

TT-WE1283 TT-WE101 TT-WE102
TT-WE106 TT-WE104

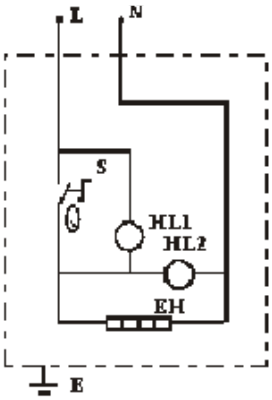


TT-WE1284

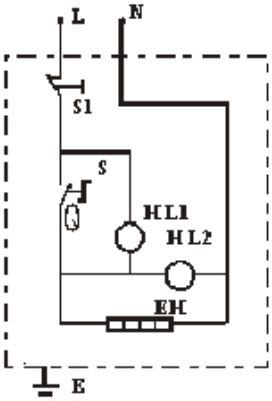


S - TEMPERATURE CONTROLLER; S1 - TEMPERATURE LIMITER; EH - HEATING TUBE; HL1 - POWER INDICATOR (GN); HL2 - HEATING INDICATOR (YE); KM - AC CONTACTOR; E - GROUND PROTECTION